

Change settings

Toggle the **volume**, **speed** and **tone/pitch** settings Press **Power** button, **Up** button to Increase amount, **Down** button to decrease.

The Power button toggle mode defaults back to Volumn within few seconds.

Basic keys

- 1 **Bookshelf** if pressed, **User Guide** if pressed and held
- 2 Navigation element
- 3 Delete or Copy
- 4 Navigate Backward
- 5 Where am I?
- 6 Navigate Forward
- 7 Press for **Menu** or **Text-to-Speech voice Toggle** if pressed and held
- 8 Navigation Element
- 9 Text-to-Speech / Recorded audio modes toggle / Random mode toggle (Music)
- 0 **Info** if pressed, **Key Describer Mode** if pressed and held
- * **Cancel** if pressed, **Key pad Lock** if pressed and held
- # Confirm

To unlock the keypad, press keys 1, 2, and 3 in sequence.

Bookshelf

- | | |
|-------------------------|---|
| 1 key | Press multiple times to rotate through the circular list of Bookshelves |
| Go To key (above key 1) | To enter a relative book number |
| # | To move to the entered book number and remain on the bookshelf |
| Play key | Start to play from where you left off in the selected book |
| Go to key | When in Bookshelf the Go to Page key becomes a Go to Book key |

Inside a Book

- | | |
|--------------|---|
| 2 and 8 keys | To choose a navigation level |
| 4 and 6 keys | To move backward and forward between elements at the selected level |
| * | within 10 seconds to undo the 4 and 6 key actions |

These differ from book to book but typically level 1 means chapter, level 2 means section, and level 3 means sub-section and so on.

Delete a book

- | | |
|-------|--|
| 3 key | To delete the selected item and Stream will ask you to confirm. Press the Pound (#) key to delete or any other key to cancel the delete. |
|-------|--|

Language and voices

- | | |
|----------------------|--|
| 7 (press and hold) | To select an alternate Text-to-Speech voice installed in your Stream |
| 7 (press repeatedly) | To access the language menu |
| 4 or 6 | To cycle through choices |
| Confirm | To save choice |

Hard reset

Power key for 2 seconds will not power down the player, keeping the key held for the required hard reset time will still perform a hard reset on release.

